



Installing guide for MOSAIQUE


Depending on the substrate, **MOSAIQUE** wooden panels can be installed in 3 different ways:

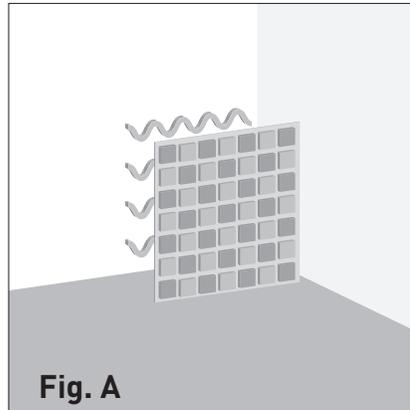

1) Attach the panel to the wall using a fitting mounting adhesive.

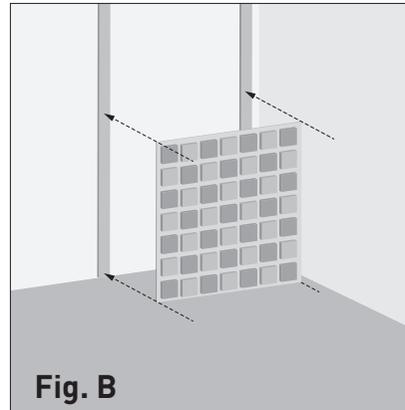

2) Fit the panel to a frame of wooden strips using countersunk bolts .

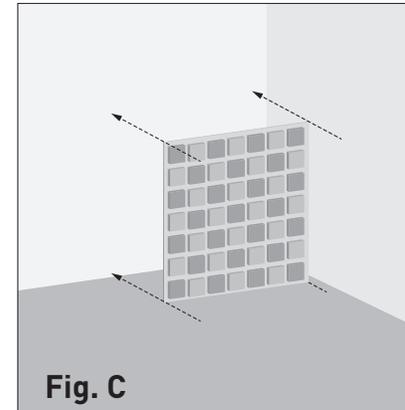

3) Fix the panel to the wall by drilling holes and using the right dowels and screws.

The panels should only be installed indoors with low humidity.

SN Deco Group does not assume responsibility for incorrect installation of the panels on the wall.

NO RETURN REQUESTS ARE ACCEPTED AFTER INSTALLING THE PANELS!

4x  = 1m²



Made in Transylvania

Designed by

Vanilux

PART OF **SN DECO GROUP** TRANSYLVANIA

